

WOOD PROJECTS:



Tool Box

USES



USES



USES



TOOLS

Hex Key



Screws



How to Use a Hex Key

**Lefty
Loosey**




**Righty
Tighty**




MATERIALS




SCREWS

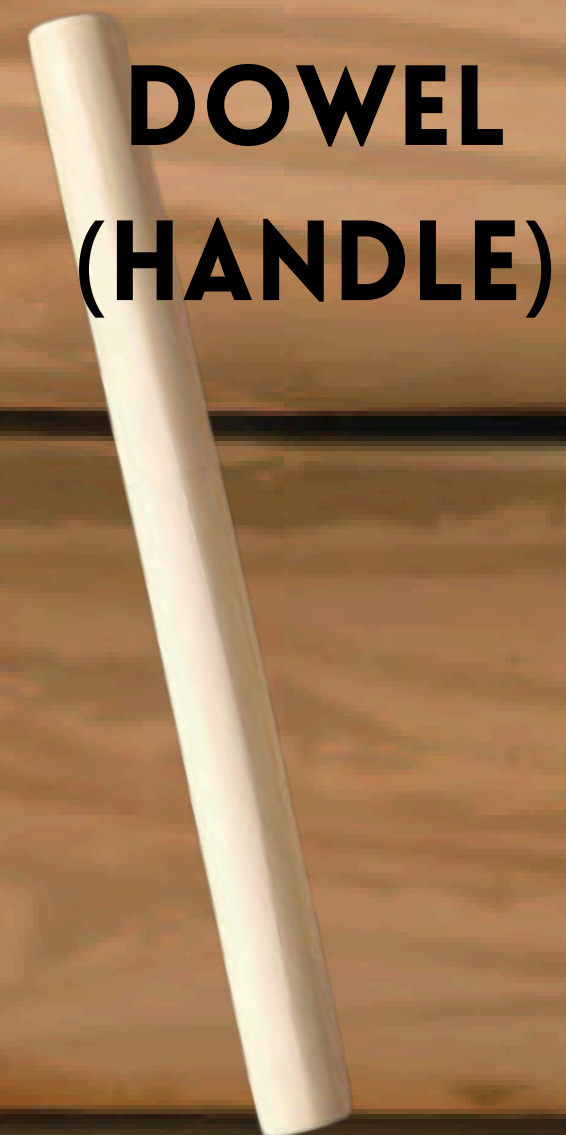

CARPENTER'S RULE

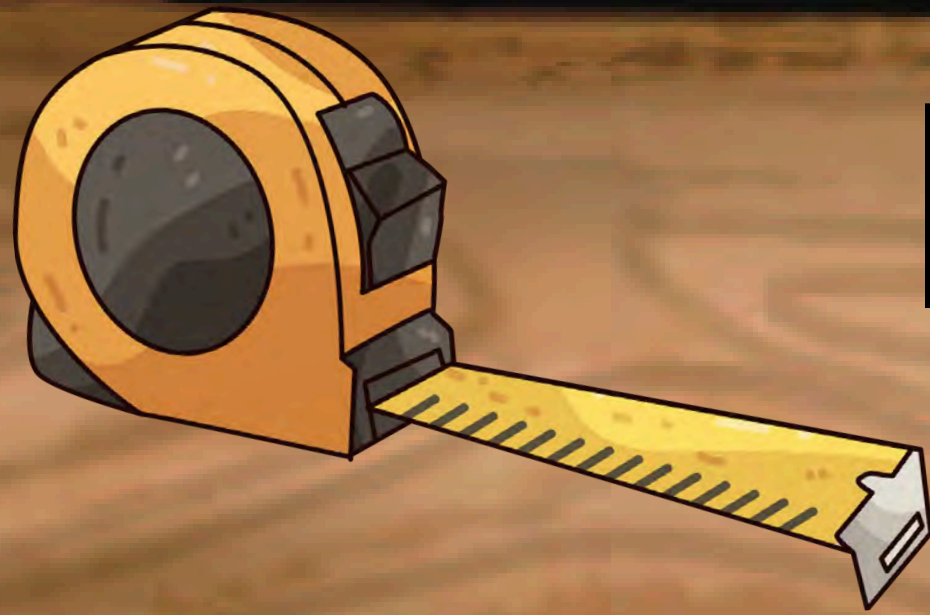

**MEASURE
TWICE**

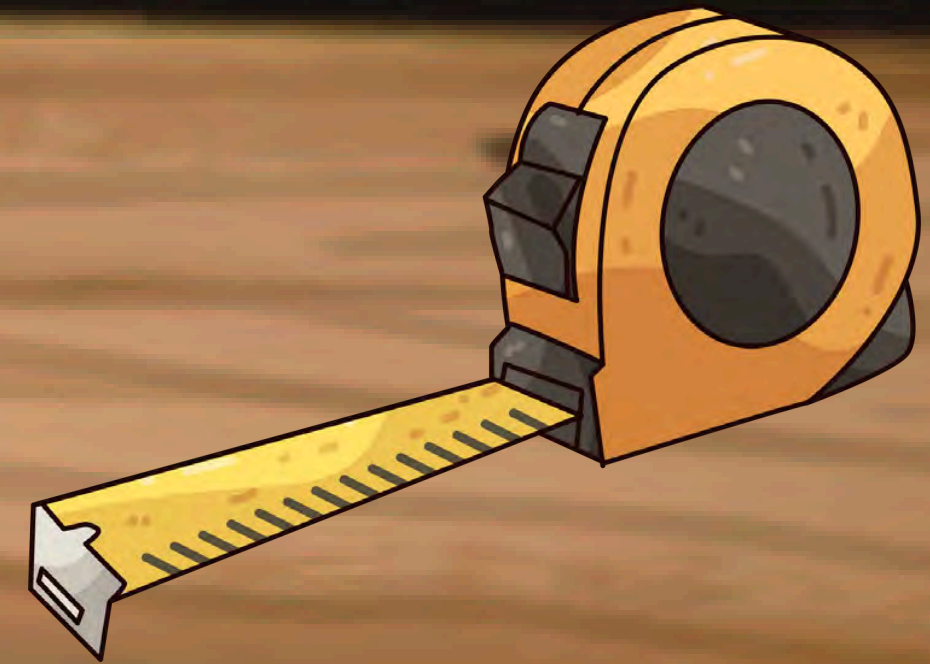

**CUT
ONCE**



STEP 1

WRITE YOUR NAME

FLIP THE BASE OVER
SO YOUR NAME IS
ON THE BOTTOM



PRACTICE ASSEMBLING

**LET'S TEST-FIT THE PIECES
BEFORE WE ADD SCREWS!**



STEP 2 PRACTICE

PLACE THE 2 RECTANGULAR
PIECES ON TOP OF THE BASE

REMEMBER THAT
YOUR NAME SHOULD
FACE DOWN.



HOLE



STEP 3 PRACTICE

PLACE ONE PENTAGONAL
END PIECE IN PLACE



STEP 4 PRACTICE

HOLD HANDLE IN PLACE

HANDLE



STEP 5 PRACTICE

**PUT SECOND PENTAGONAL
END PIECE IN PLACE**



LET'S START ATTACHING PIECES!

**FIND YOUR
HEX KEY AND
SCREWS.**




STEP 1 ATTACH

GRAB 2 SCREWS
AND THE HEX KEY



LOCATE THE 2 HOLES
FROM THE BOTTOM
OF THE BASE

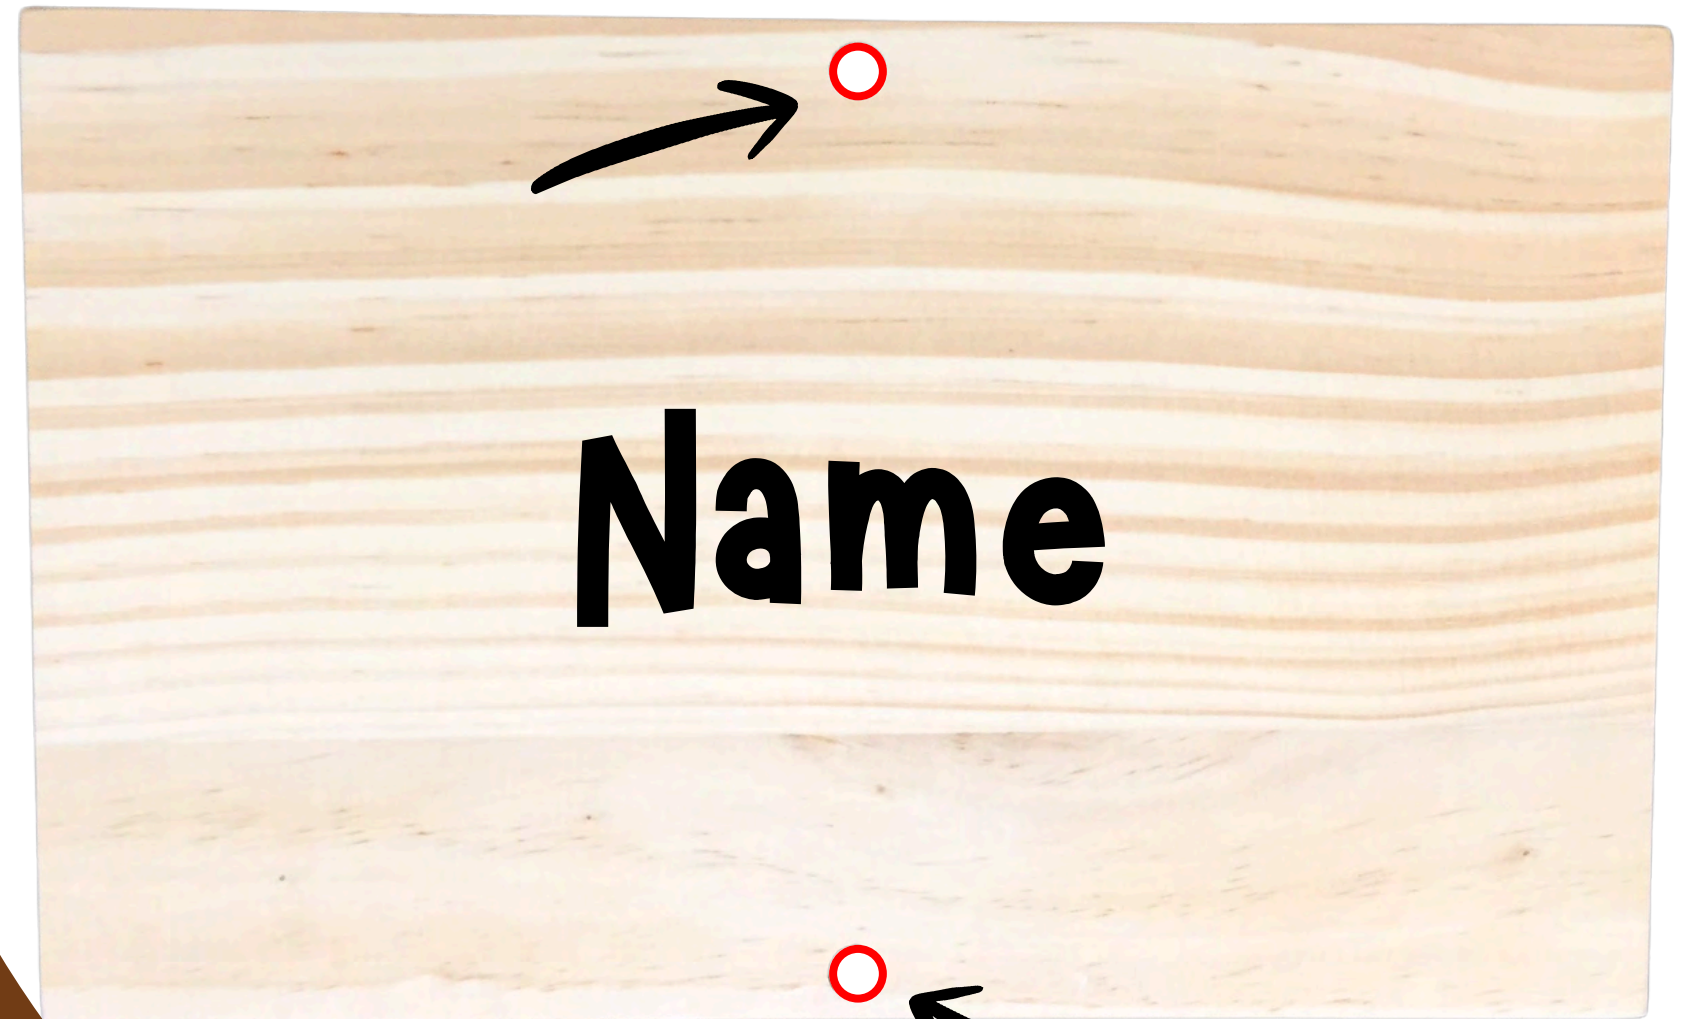

STEP 2 ATTACH

ATTACH ONE RECTANGULAR
PIECE IN PLACE AT A TIME

Remember:



Righty
Tighty

USE 1 SCREW
ON EACH SIDE



Righty
Tighty

Name

(BOTTOM VIEW)



Righty
Tighty




STEP 3 ATTACH

**ATTACH ONE PENTAGONAL
END PIECE IN PLACE**

**LARGE HOLE
FACES INSIDE**

**USE 6 SCREWS
TO SECURE
END PIECE**

**(3 SCREWS ON
EACH SIDE)**

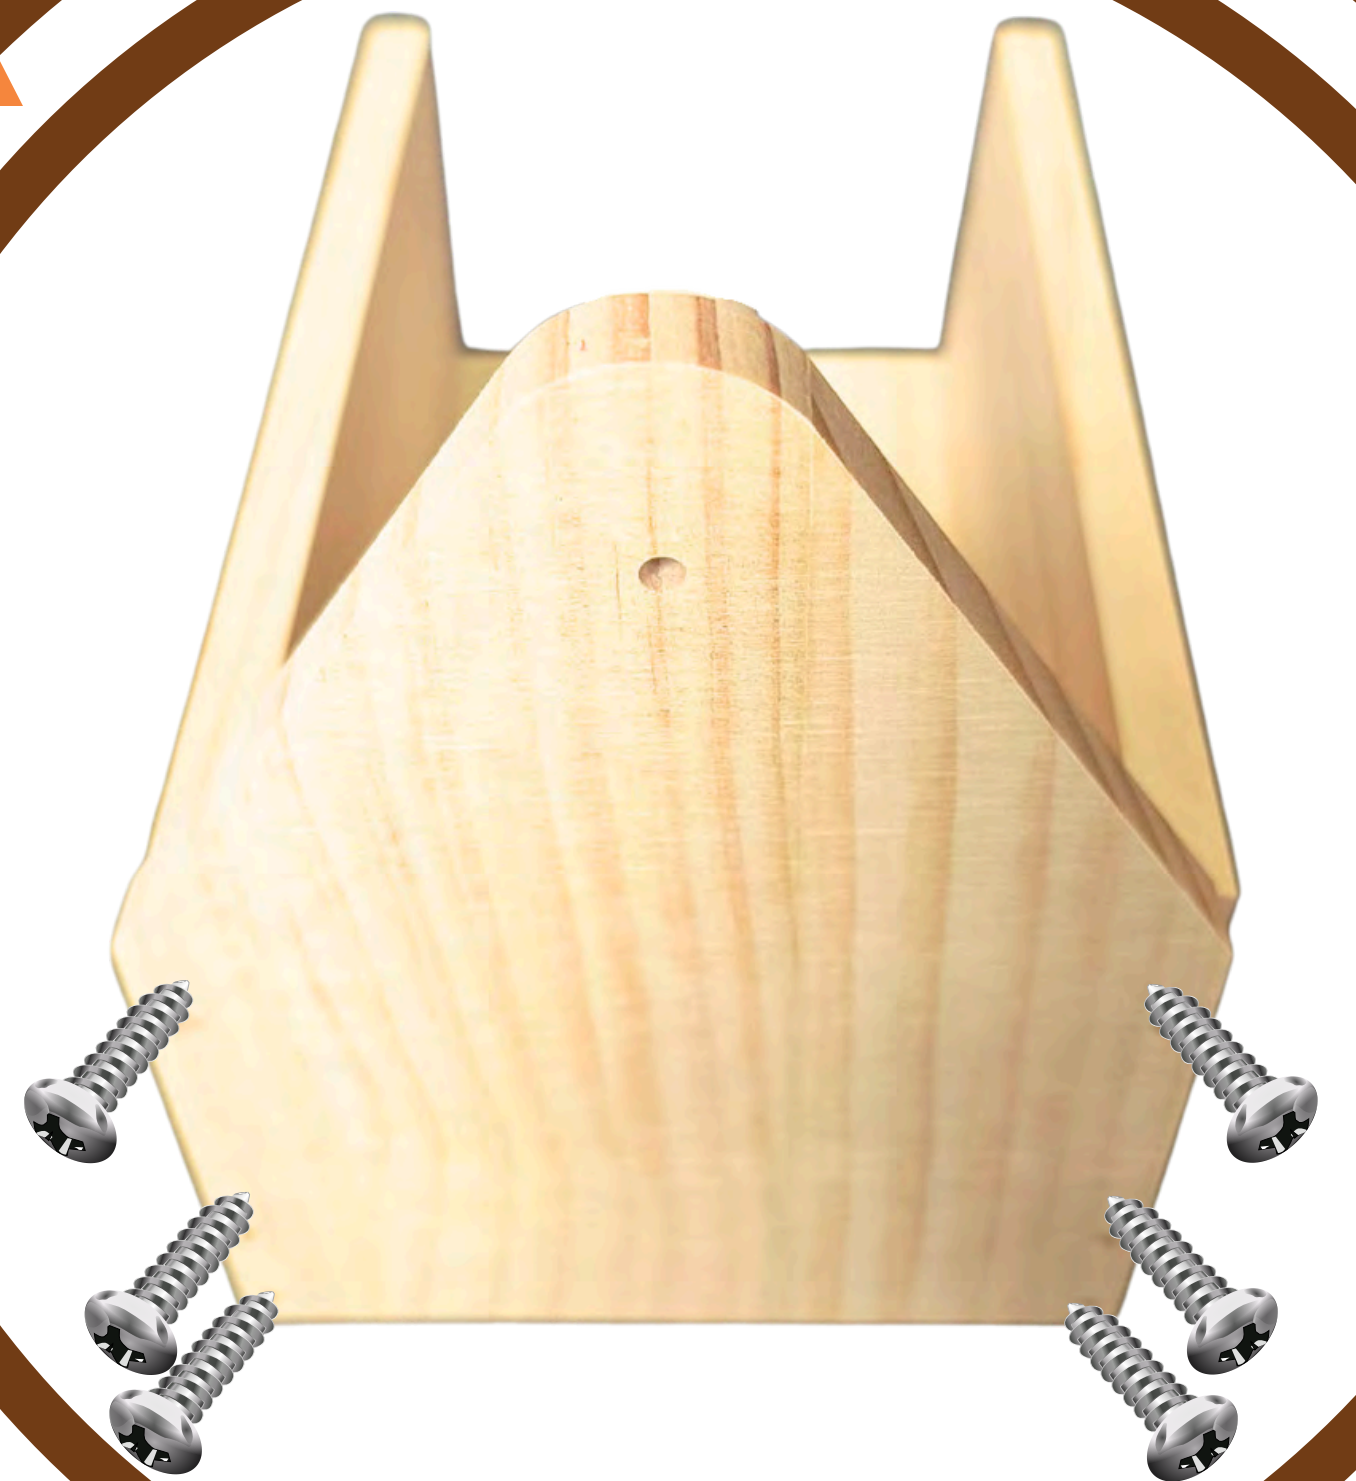

STEP 4 ATTACH

ATTACH HANDLE WITH 1
SCREW ON THE END PIECE



STEP 5 ATTACH

ATTACH SECOND PENTAGONAL
END PIECE WITH 6 SCREWS



STEP 6 ATTACH

SECURE HANDLE WITH A SCREW





BREAK TIME

PAINING

- DO NOT PAINT THE BOTTOM
- PAINT THE HANDLE LAST

CLOTH



PAINTBRUSH



WATER



PLATE FOR PAINT





**Thank
you!**